




CLIP SEALER

OPERATING INSTRUCTIONS



Before using the tool, read the instruction carefully

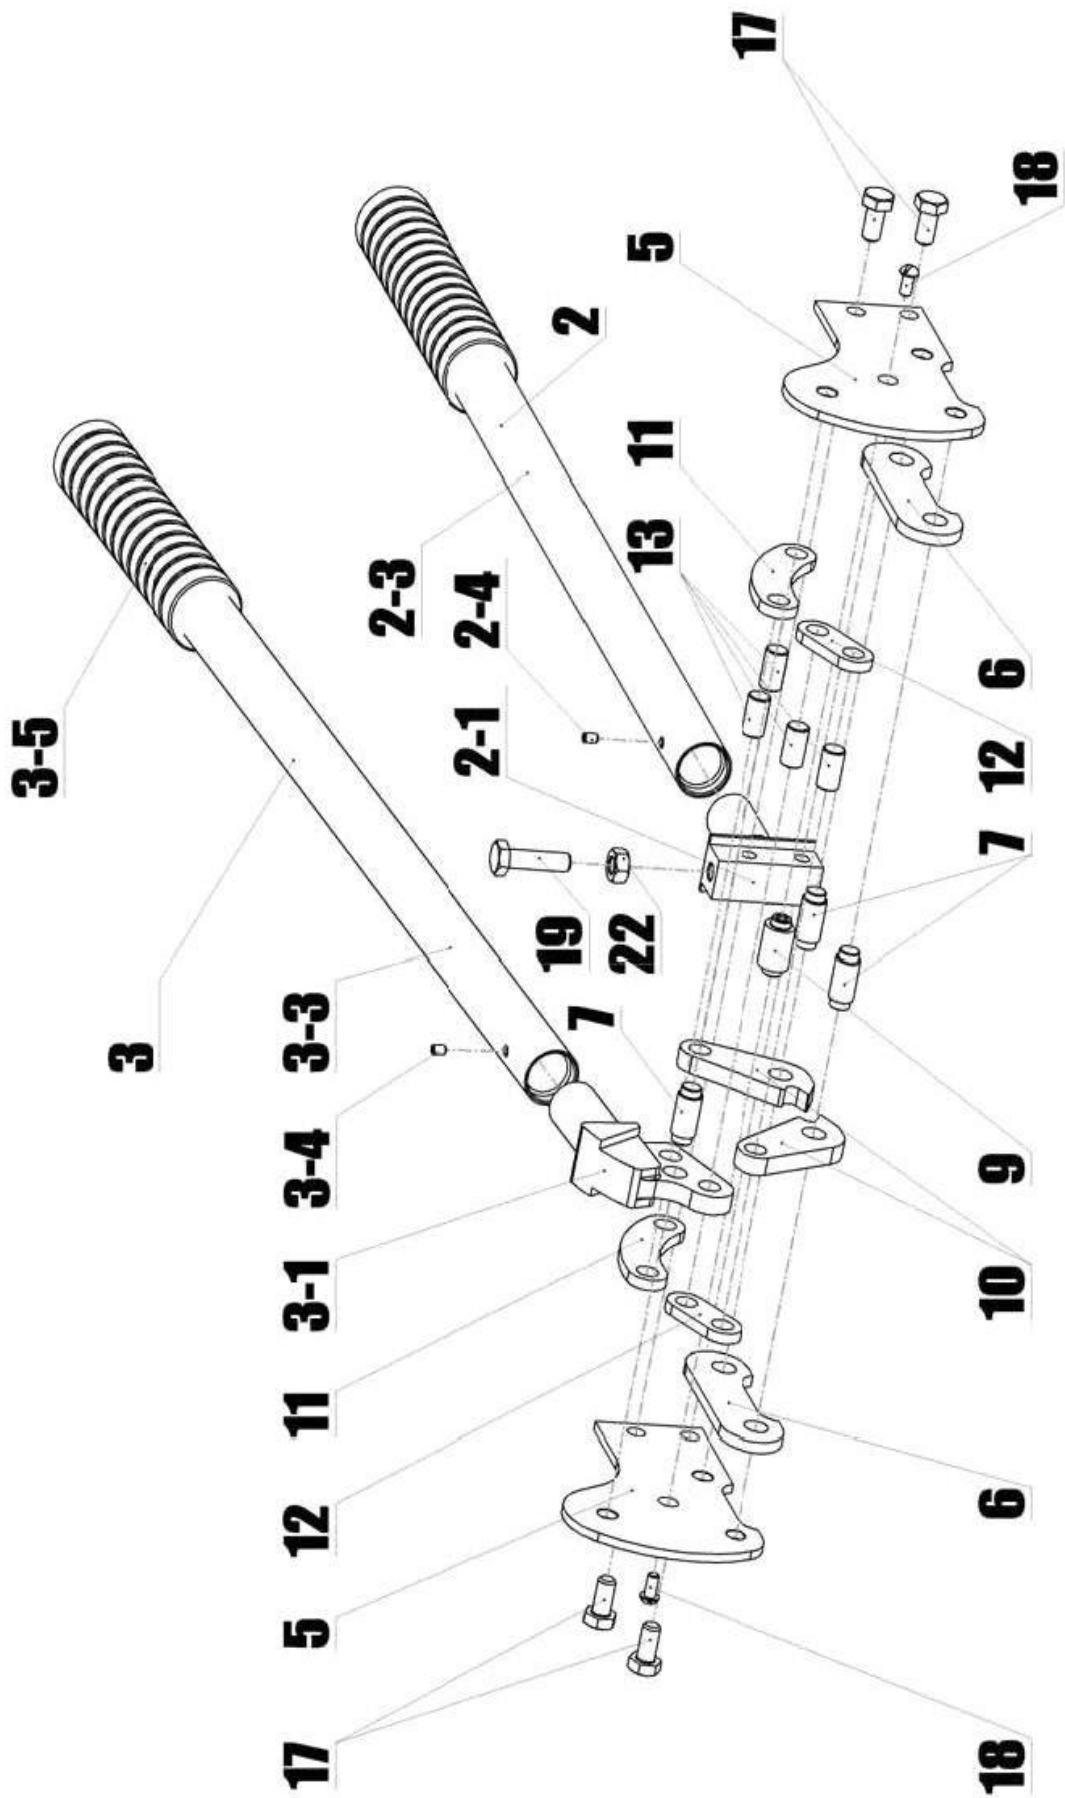

Operating instructions for CLIP SEALER which is made for sealing of steel strap by making lock with using seal.

ATTENTION: These operating instructions must be read by all persons concerned with work on strapping tool.

1. PURPOSE

1.1. The tool can be used in various branches of industry in making up of freight units, particularly shipping bundles of metal rolling, pipe, brick; their use at packing of transport packages with round form of small diameter especially recommended.

1.2. Tools can be used inside as well as outside in all climatic zones.

1.3. Tool working on Regular Duty & Heavy Duty steel straps: 1 1/5" - 1 1/4" (30-32mm) width and to 0,039" (1mm) thickness.

2. TECHNICAL DATA

2.1. Overall dimensionsa, mm..... 670x120x40;

2.2. Quantity of bites through the strap..... 1 pair;

2.3. Wight, lbs. (kg)..... 5,5 (2,5).

3. COMPLETE SET

- Clip Sealer, pcs..... 1;

- Operation instructions, pcs.....1.

4. ORDER OF WORK

4.1. After tensioning the strap with Croc or Bulldog tensioners, take Clip Sealer by fixed lever 2, movable lever 3 move it «from yourself», impose the tool on seal and by reserve motion of lever 3 («to yourself» and down) make deformation and biting of seal with strap with making lock (pic. 2).

4.2. Move lever 1 «from yourself» until stop and take off sealing tool from seal.

4.3. Set sealing tool on seal again, moving it close to the ledges of already formed lock, and repeat steps mentioned in p. 2.



Pic. 2

5. TECHNICAL SERVICE AND REPAIR.

- 5.1. Check at least one time a week charging of all external screws of tool.
- 5.2. For all questions about repairing and having spare parts please contact manufacturer of official dealer.

6. STORAGE AND TRANSPORTATION RULES

- 6.1. The tool should be stored preserved indoor.
- 6.2. You can choose any method of transportation the tool. The tool should be packed in cartoon or woody box or warped with paraffin paper.

7. WARRANTY TERM

The manufacturer guarantees perfect work of the tool during 12 months from the date of shipment if all operating rules are observed, except rubbing parts.

Guarantee repair is free and made by manufacture or manufacturer's representative at his place or at customer's place according to their agreement. Repair after expiration of guarantee term is made by manufacturer or manufacturer's representative according to additional agreement.

Clip Sealer № _____

Date of sale _____

S.P.

Seller sign _____